

Mounting Instructions Handlebar Risers 26877



Fit for:

BMW F800GS & Adventure

BMW R1200GS 2004-2007

BMW R1200GS Adventure 2005-2008

Shipping includes:

2x handlebar risers

4x Torc screw M8x30

1x street homologation


1x mounting instructions

Disassembly:

Remove the upper half of the handlebar fixation (clamp blocks).

Mounting:

The handlebar risers (1) will be directly mounted on the lower handlebar fixation (lower part of the clamp blocks) under the handlebar. Please use the enclosed M8x30 screws (2) for fixation. The handlebar risers must be used in a way that the handlebar comes closer to the rider. Then, bring the handlebar in position and mount the upper original handlebar clamps with the original screws (3) according to your vehicle manual.

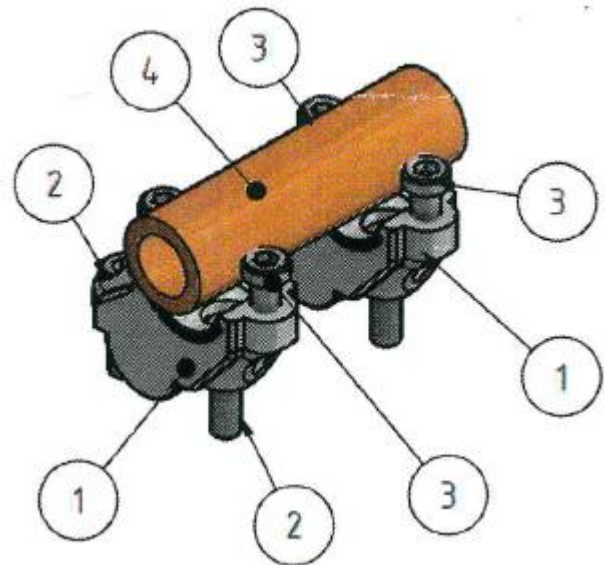

Screws and safety:

The enclosed screws must be fixed with the following torque: M8 → 23 Nm

Please also secure the screws with liquid threadlocker and regularly check the screws for a firm fit.

Remarks:

After you completed the mounting, please pay attention that the brake lines, Bowden cables and other cables do not tension or scrub!