



Read these instructions carefully and thoroughly before beginning work.

Contents of Kit

Windscreen, Lexan FMR polycarbonate	Qty.	
Bag 515	1	
Cap, aluminum	3	
Screw, Flat HS M5 x 40		2
Screw, Flat HS M5 x 30		1
Bushing, Rubber	3	

Tools Required:

- TX25 Screwdriver.
- 3mm Hex Key

INSTALLATION

1. Remove the 3 original Torx screws from existing BMW windshield. Screws will not be reused. **Figure 1. (TX25 Screwdriver)**

2. Remove the original BMW windshield. The U shaped plastic piece beneath original windshield will fall free. You will re-use this piece with the installation of the ZTechnik windshield.

NOTE: To properly install this shield on an F 650 GS (NON-DAKAR Model), you will need to purchase the U-shaped plastic piece from your BMW dealer. The BMW part number is 71-60-7-653-849.

3. Install 3 rubber grommets into new ZTechnik windshield holes. **Figure 2.**

Install ZTechnik Windshield

4. Reposition U shaped plastic piece. Start at the lower center hole and install the ZTechnik windshield with 1 Aluminum Cap and the M5x30 Screw (short screw.) **Figure 2. (3mm hex Key)**

5. Install 2 remaining Aluminum Caps and the M5x40 Screws at the remaining hole locations, left and right side. **Figure 3. (3mm hex Key)**

6. Tighten all screws. Do not over tighten



Figure 1



Figure 2

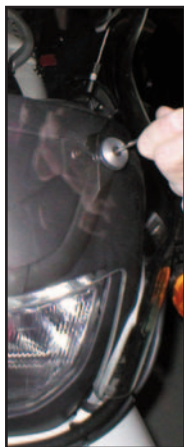


Figure 3

MAINTENANCE

To clean the screen, wash with a clean soft cloth, plenty of warm water and if necessary, a non-abrasive soap such as dishwashing liquid. Flannel or soft chamois make good cleaning cloths. **Paint, glue residue or grease removal:** Moisten cotton with Naphtha or Turpentine followed by a wash as above. National Cycle Shield Wash™ makes a good daily cleaner and comes with a handy travel size bottle. N1401-01 Shield Wash is safe to use on helmet visors as well.

Please do not clean polycarbonate in hot sun or high temperatures. Do not clean the screen with glass cleaners or use rain protective products on the screen. Do not allow brake fluid, alcohol, or strong solvents to contact the screen.

WARNING

Never ride your motorcycle with loose accessory mounting hardware. Check the hardware for tightness regularly.

Today's motorcycles are built with enough frame rigidity to withstand the moderate loads imposed on them by the foreseeable addition of an accessory(ies). If an accessory(ies) adversely affects your motorcycle's stability, immediately remove the accessory(ies). Do not ride a motorcycle that exhibits unsafe handling traits.

Have experienced service personnel correct any problem before riding with the accessory(ies) installed. For further questions concerning handling problems associated with an accessory(ies), contact your dealer, motorcycle manufacturer, or accessory manufacturer.



ZTechnik 3-Year Limited Warranty

Register your windshield on Line at: www.ZTechnik.com

ZTechnik hereby warrants to the original registered owner of a ZTechnik polycarbonate windshield for a period of three years from the date of purchase against breakage. This limited warranty is expressly limited to the replacement of the polycarbonate windscreen. This limited warranty does not include scratches, coating failure, cosmetic wear and tear, replacement of hardware, or any consequential damages or expenses including labor cost of installation, removal and/or replacement, inconvenience, inbound freight expenses or damage to any other component of the motorcycle or any other accessories. Certain chemicals, generally known as acidic hydrocarbons, are known to cause polycarbonate damage and will not be covered under this limited warranty. Please refer to the cleaning instructions supplied with all ZTechnik windshields.

Visit www.ZTechnik.com for further details or call or write ZTechnik / PO Box 158 / Maywood, IL 60153 / 708-3430400

ZTechnik PO Box 158 Maywood, IL 60153-0158 USA

708-343-0400 / Fax: 708-343-0625 / www.ZTechnik.com / e mail: info@ZTechnik.com

©2004 National Cycle, Inc.

Page 2 of 2

10-117757-000 04/04 Rev. B 10/10